


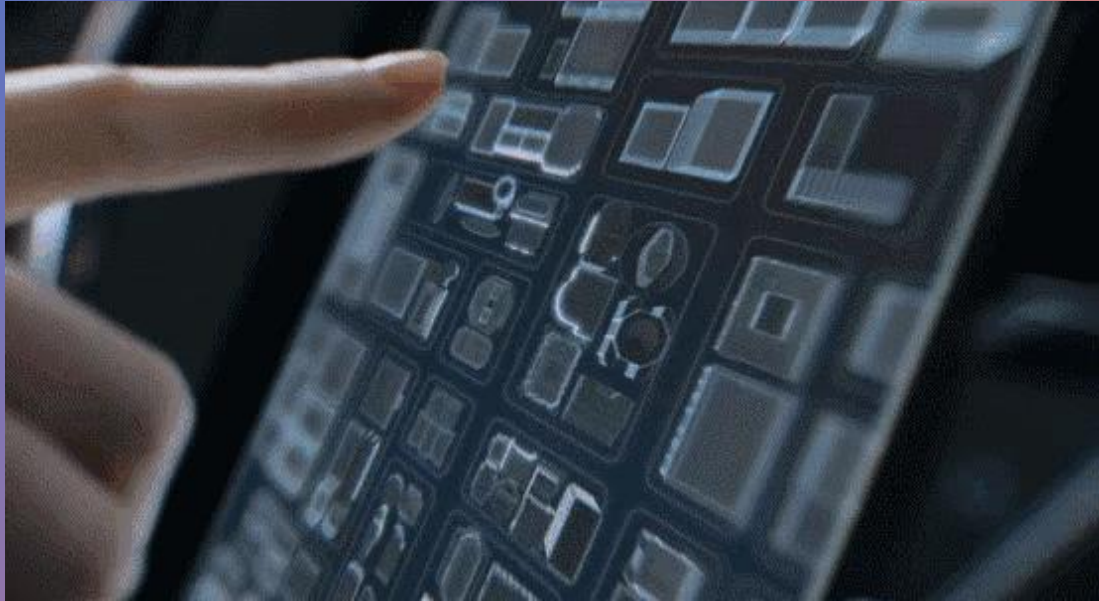

Python常用第三方库 Pycharm offline安装SOP

- By Wendy Chin
- On Oct.,27th


目錄

- Python-常用資源庫以及下載
- 常用資源庫網頁學習
- Python常用資源庫Pycharm Offline安裝SOP
- Openpyxl Terminal 安裝代碼
- Pandas Terminal 安裝代碼
- Xlwings Terminal 安裝代碼
- Python Word Terminal 安裝代碼
- Pillow Terminal 安裝代碼
- Python powerpoint Terminal 安裝代碼
- Django Terminal 安裝代碼
- Matplotlib Terminal 安裝代碼
- Pycharm 基礎使用教程

Python-常用資源庫以及下載

■ 資源包網址: [PyPI · The Python Package Index](https://pypi.org/)

1. 進入 [PyPI · The Python Package Index](https://pypi.org/) , 輸入你要找的資源包名稱, 点击版本

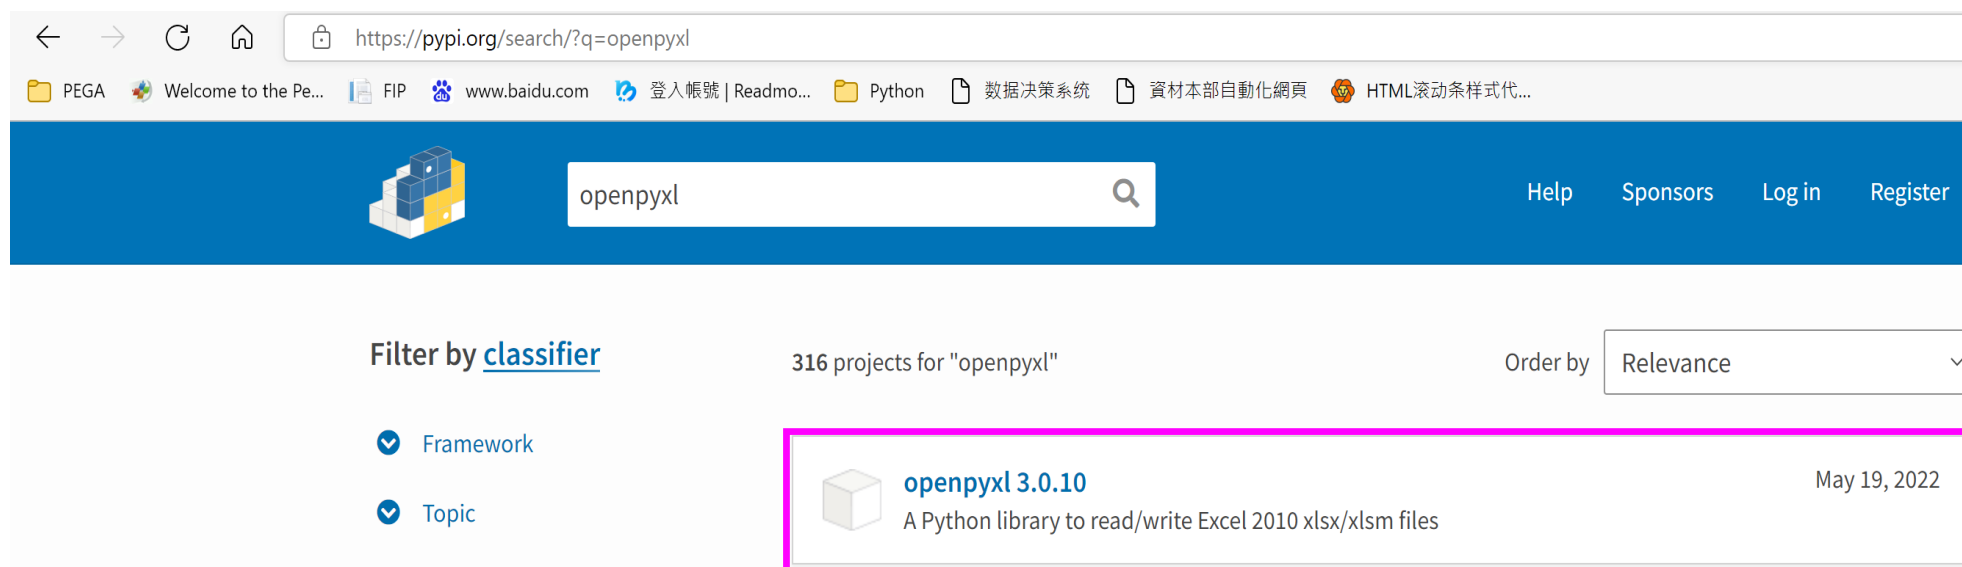

The screenshot shows the PyPI search results for the package 'openpyxl'. The browser address bar displays 'https://pypi.org/search/?q=openpyxl'. The search bar contains 'openpyxl'. The results show 316 projects for 'openpyxl', ordered by Relevance. The top result is 'openpyxl 3.0.10', described as 'A Python library to read/write Excel 2010 xlsx/xlsm files', with a release date of May 19, 2022. The result is highlighted with a red border.

Filter by [classifier](#)

316 projects for "openpyxl"

Order by Relevance

Framework

Topic

 **openpyxl 3.0.10** May 19, 2022

A Python library to read/write Excel 2010 xlsx/xlsm files

2.按<Download files>, 查看可下载的版本信息，点击链接下载后另存到本地电脑中

Navigation

 [Project description](#)

 [Release history](#)

 [Download files](#)

Project links

 [Homepage](#)

 [Documentation](#)



Download files

Download the file for your platform. If you're not sure which to choose, learn more about [install](#)

Source Distribution

 [openpyxl-3.0.10.tar.gz](#) (179.7 kB [view hashes](#))
Uploaded May 19, 2022 [source](#)

Built Distribution

 [openpyxl-3.0.10-py2.py3-none-any.whl](#) (242.1 kB [view hashes](#))
Uploaded May 19, 2022 [py2](#) [py3](#)

1.gz或whl版本皆可，
优先whl版本
2.部分资源包名称中
含有cp310字符，表
示适用于python 3.10
版本

常用資源庫網頁學習

[Python3 教程 | 菜鸟教程 \(runoob.com\)](#)

[openpyxl超详细笔记_不正经Python学习的博客-CSDN博客_openpyxl](#)

pandas用法大全

<https://blog.csdn.net/liufang0001/article/details/77856255>

Pandas经典用法：数据筛选之iloc和loc

https://blog.csdn.net/weixin_38037405/article/details/121211411

9个value_counts()的小技巧，提高Pandas 数据分析效率

https://blog.csdn.net/weixin_38037405/article/details/124569502

[HTML5 教程 | 菜鸟教程 \(runoob.com\)](#)

[CSS 教程 | 菜鸟教程 \(runoob.com\)](#)


[jQuery 教程 | 菜鸟教程 \(runoob.com\)](#)

<https://blog.csdn.net/hnyanzijun1/article/details/118931973>


Python常用資源庫Pycharm Offline安裝SOP

- | | |
|----------------|----------------------|
| 1. openpyxl | 5. Pillow |
| 2. Pandas | 6. Python powerpoint |
| 3. Xlwings | 7. Django |
| 4. Python Word | 8. Matplotlib |

1.)电脑新建文件夾用於Python某個專案開發：例如 D:\Python_Test或 E:\ Python_Test

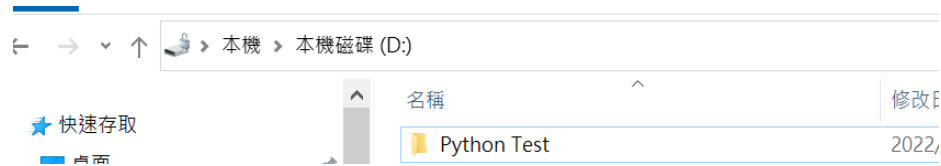

2.)电脑新建文件夾存放第三方庫包 D:\Python\Python313_KU 或 E:\Python\Python313_KU

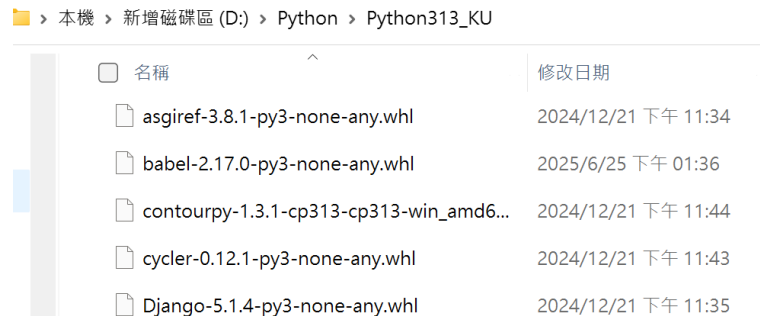


Pycharm 2025.1 Terminal 安裝模式：

1




1. 點擊電腦桌面快捷鍵或者在“開始”菜單點擊Pycharm 程式.

2

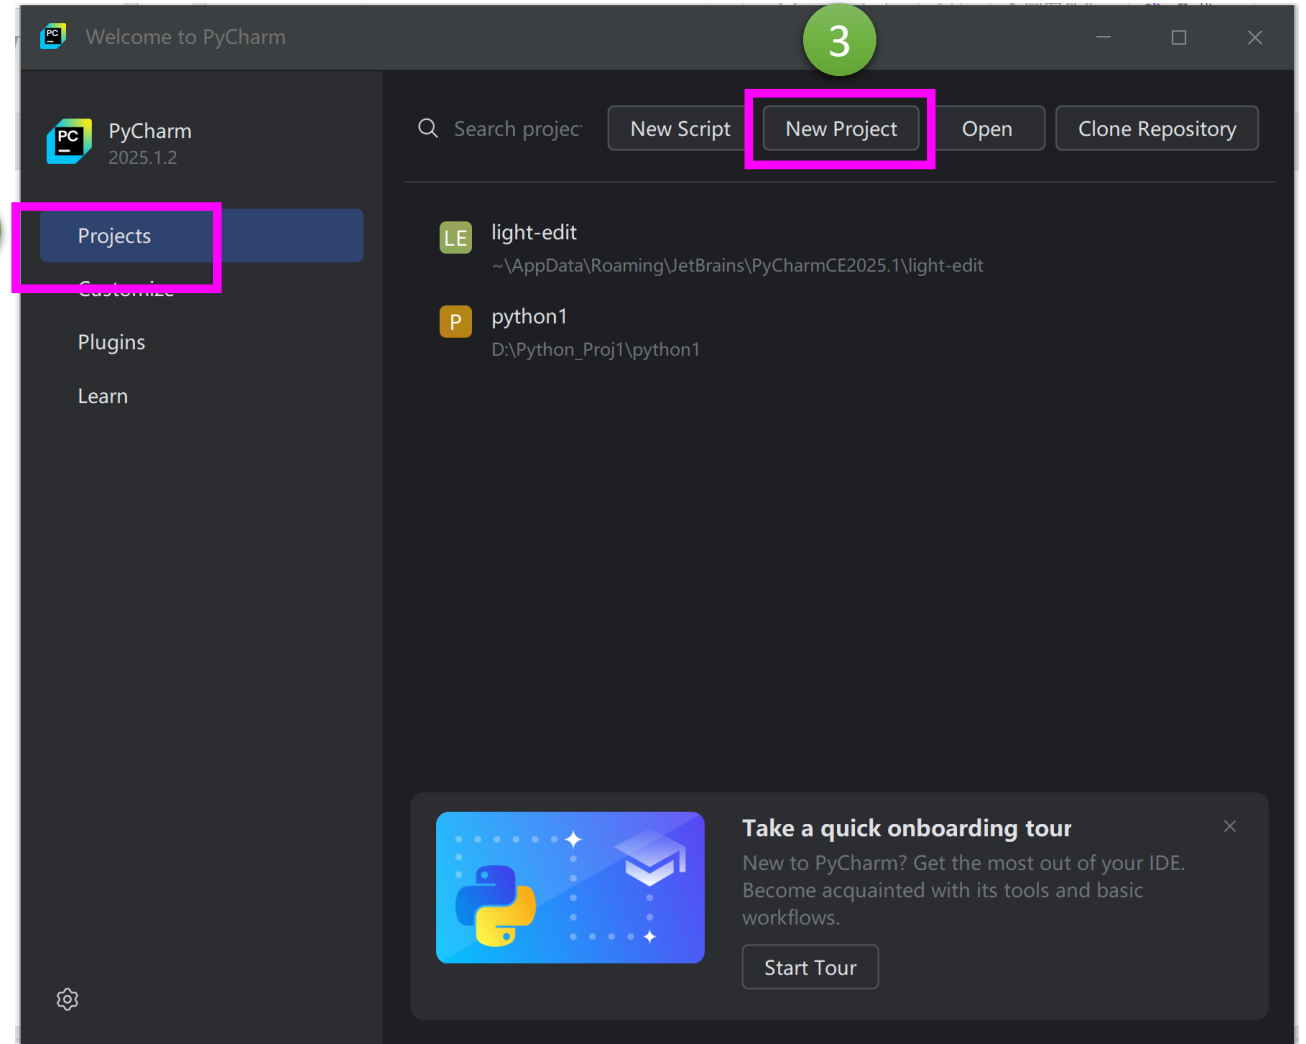


2. 進入Pycharm 頁面，點擊“Project”(未建任何Project的情況下不會有Project清單,若最後一次已經打開編輯過某個Project, Pycharm 會默認開啓最後一個Project)


3. 點擊“New Project”

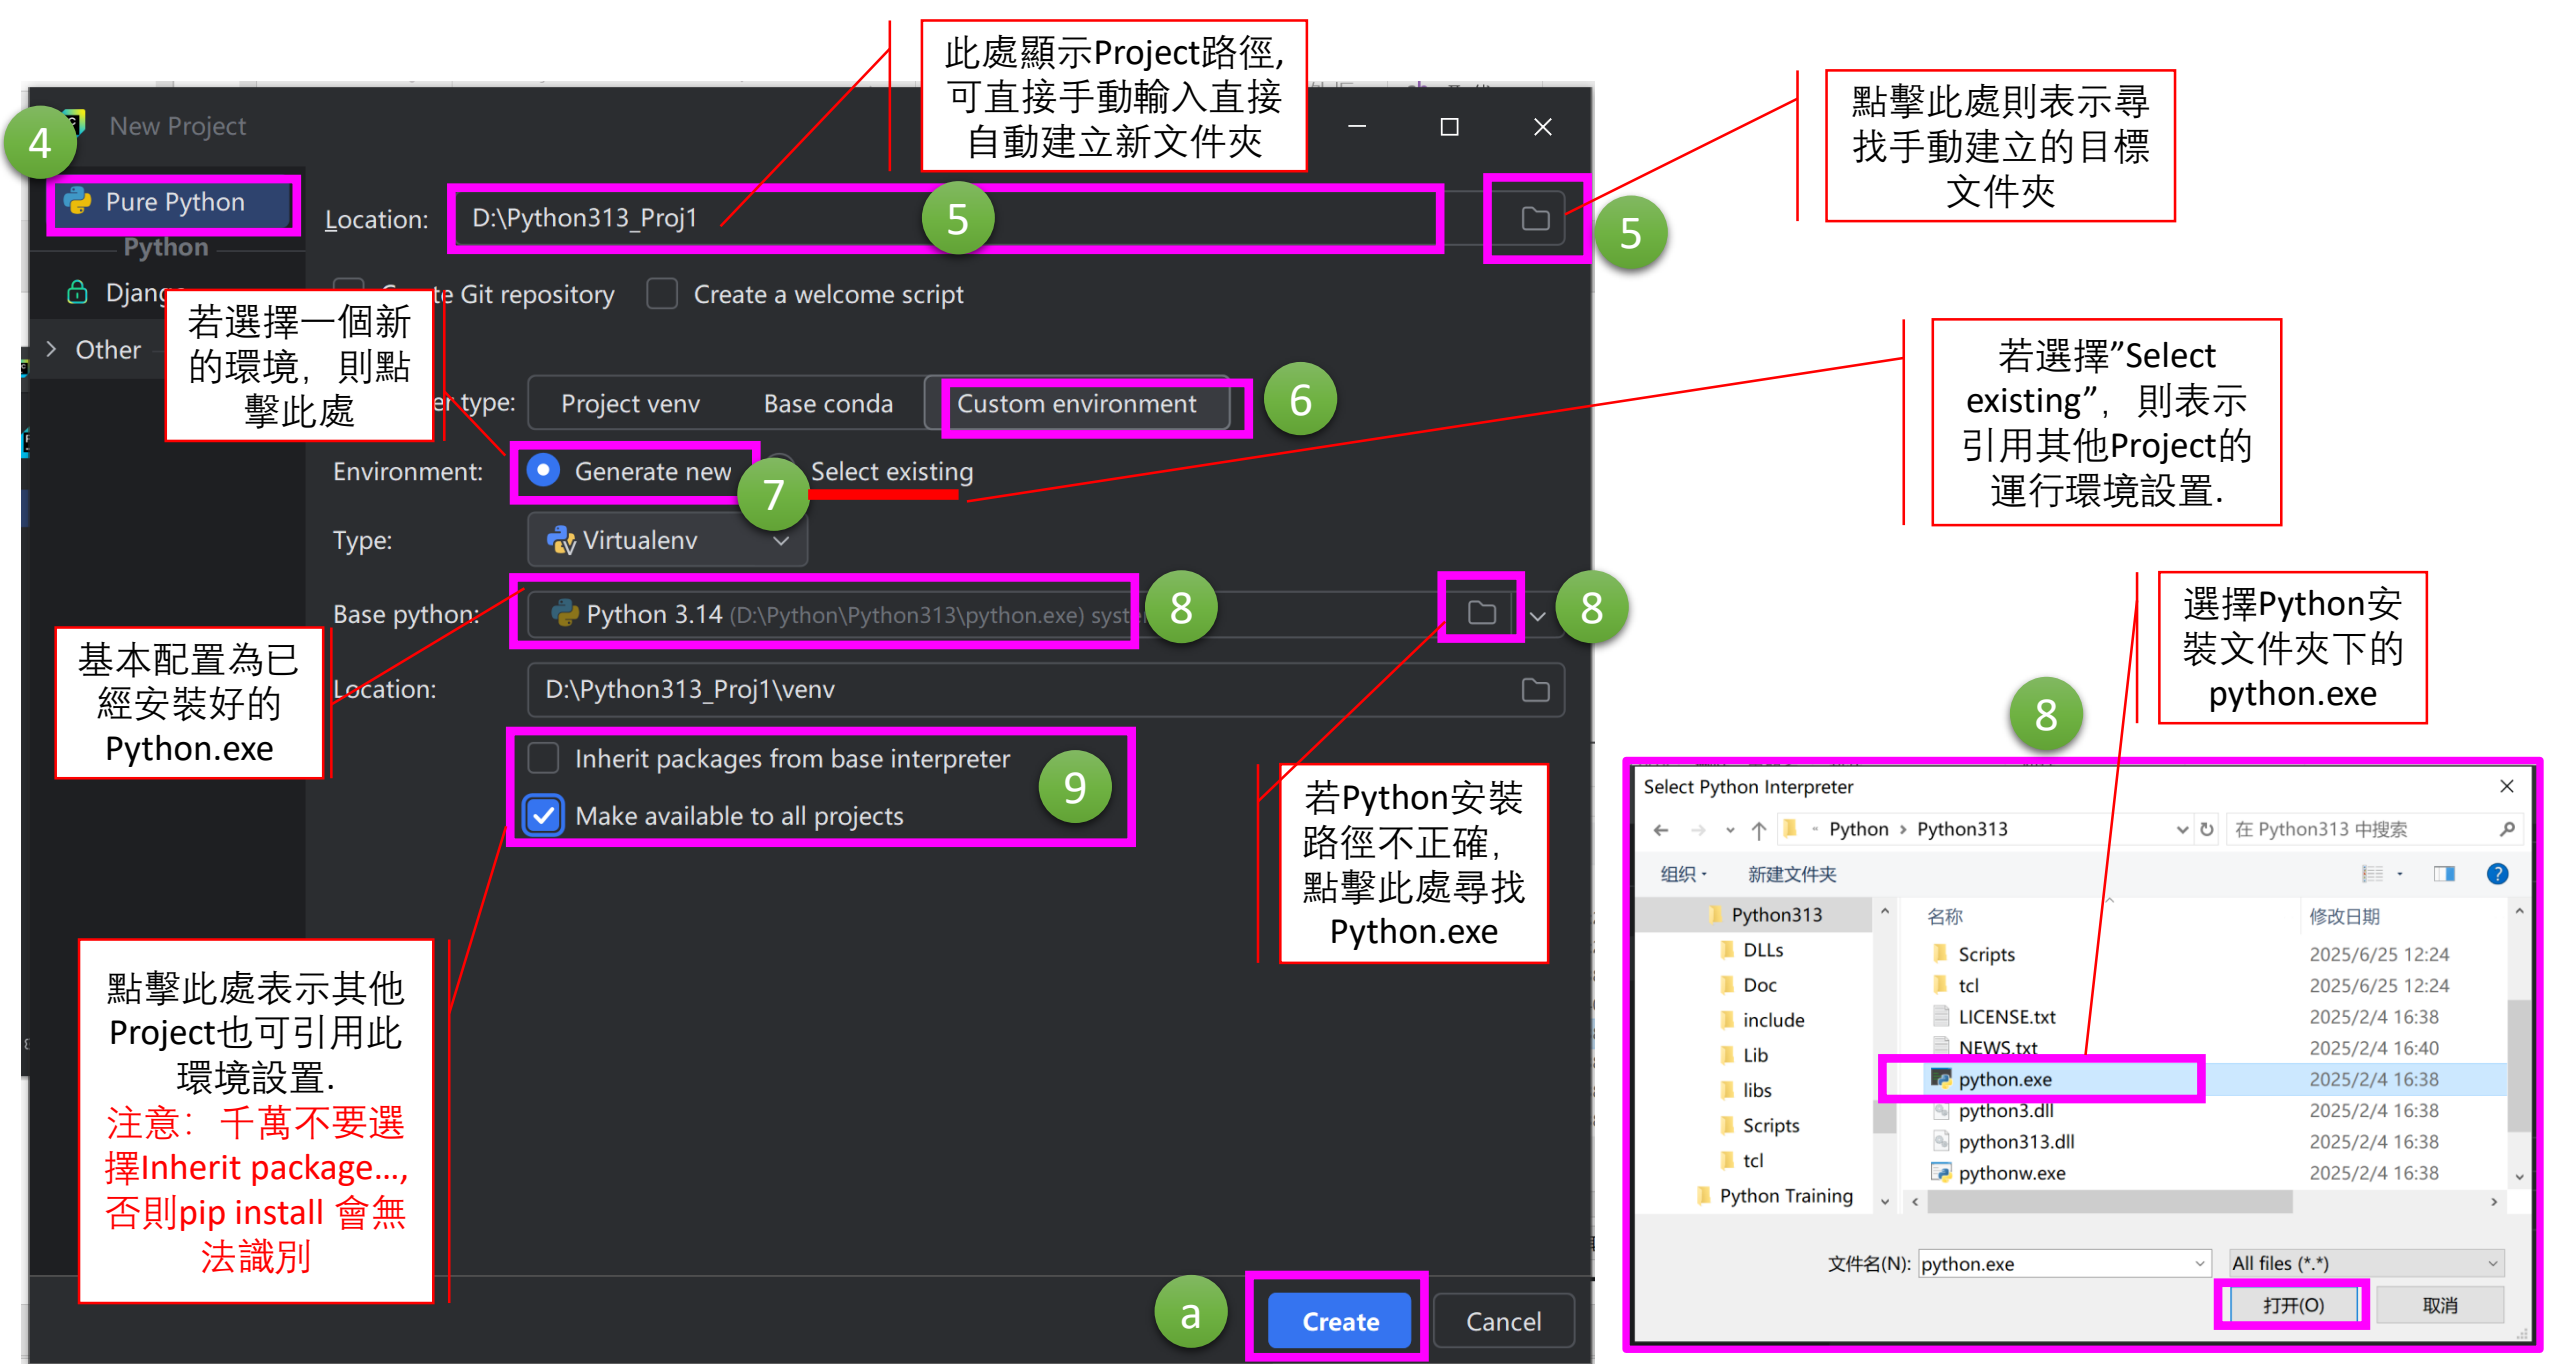


點擊“Create”后首次出現的界面,點擊“Skip”跳過引導步驟說明

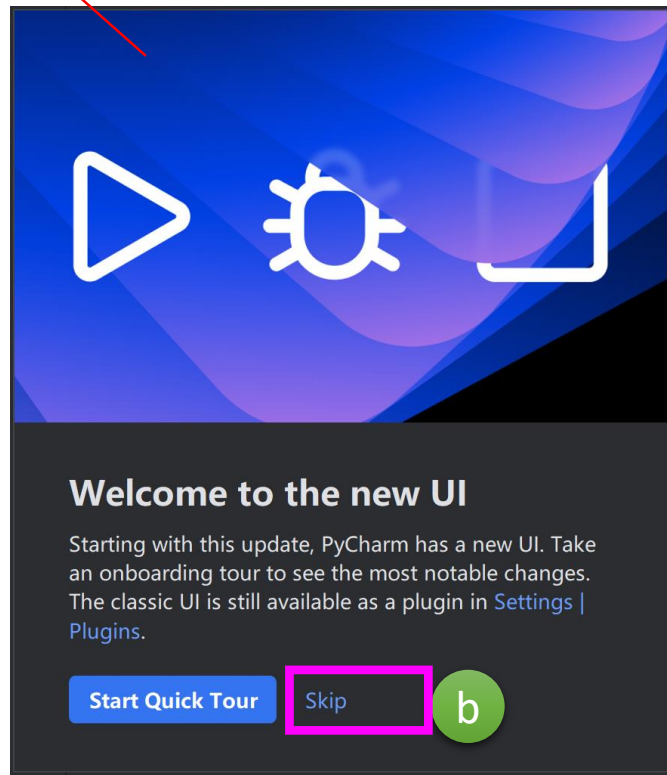

首次打開Pycharm,防火牆會跳出警示框, 點擊“取消”

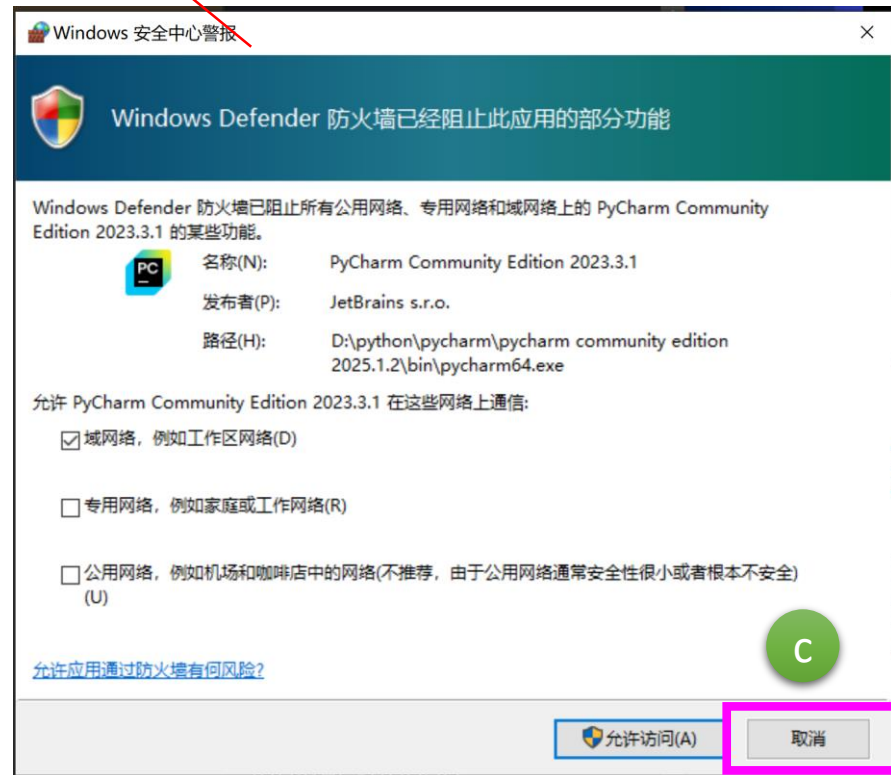

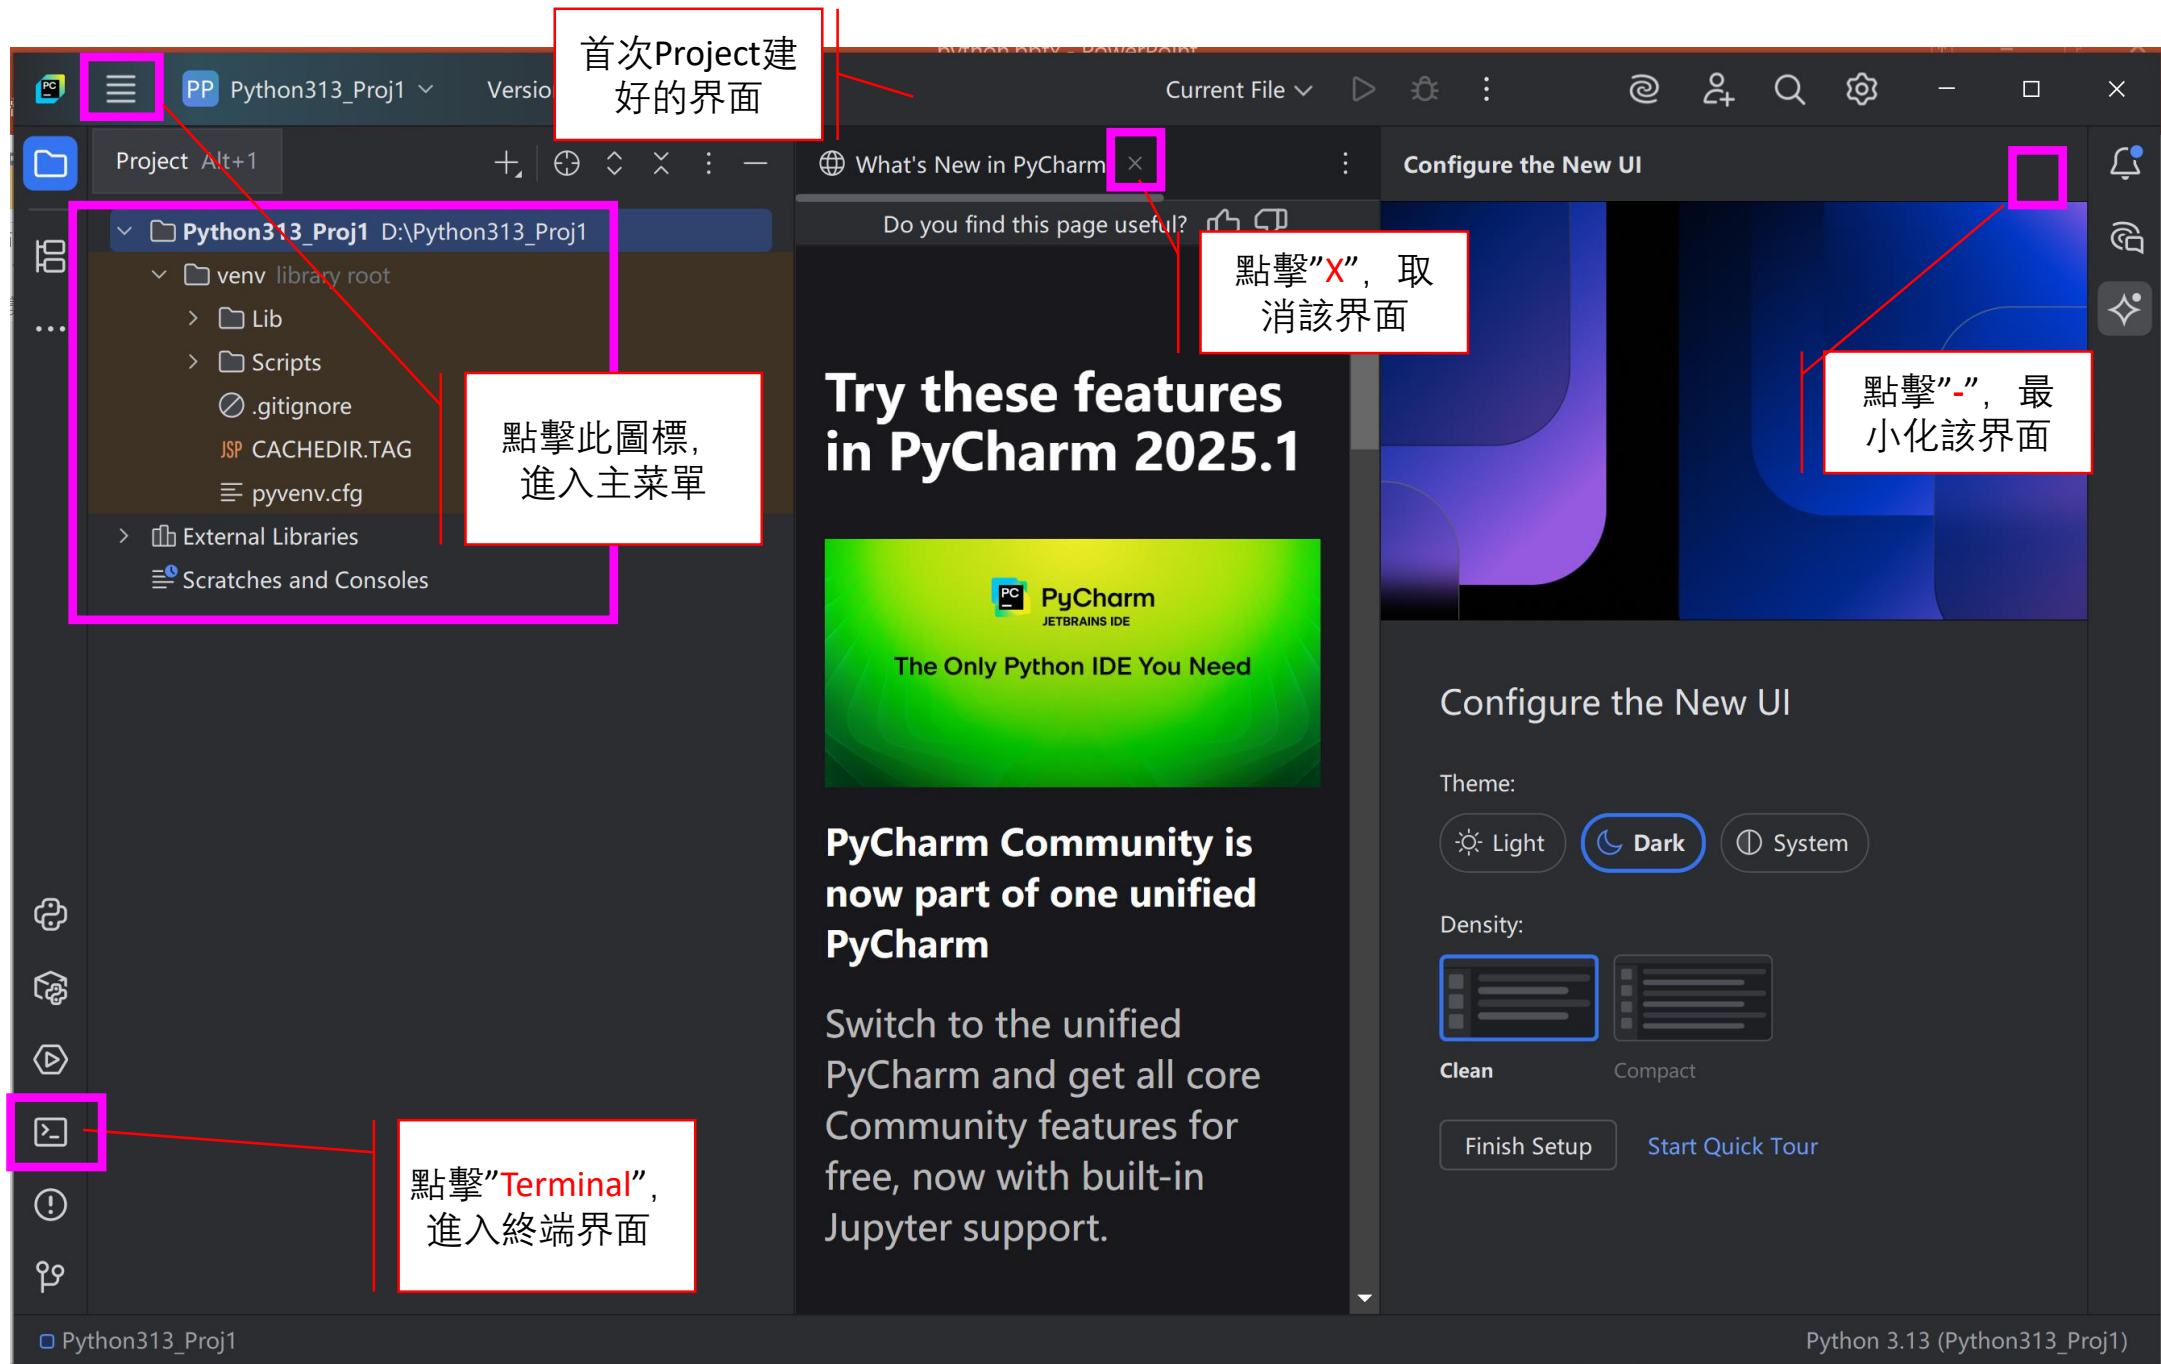

The screenshot shows the PyCharm IDE interface. The 'File' menu is open, and 'Settings...' is highlighted. The 'Settings' dialog is open, showing the 'Python Interpreter' section for the project 'Python313_Proj1'. The 'Python Interpreter' section is selected in the left sidebar. The main panel shows the installed packages, with 'pip' highlighted in a table.

Package	Version	Latest version
pip	25.1.1	


A red arrow points from the 'pip' row in the table to a text box containing the following text:

New Project新建成功時,Package 中會有"pip"

- 檢查Settings中的解釋器是否存在有效:
- 訪問路徑: 主菜單中 File=>Settings=>Project:xxx=>Python Interpreter

Setuptools Terminal 安裝代碼(1):

0 若查詢python版本，可直接在Terminal界面手動輸入"python"，退出時手動輸入"exit()"

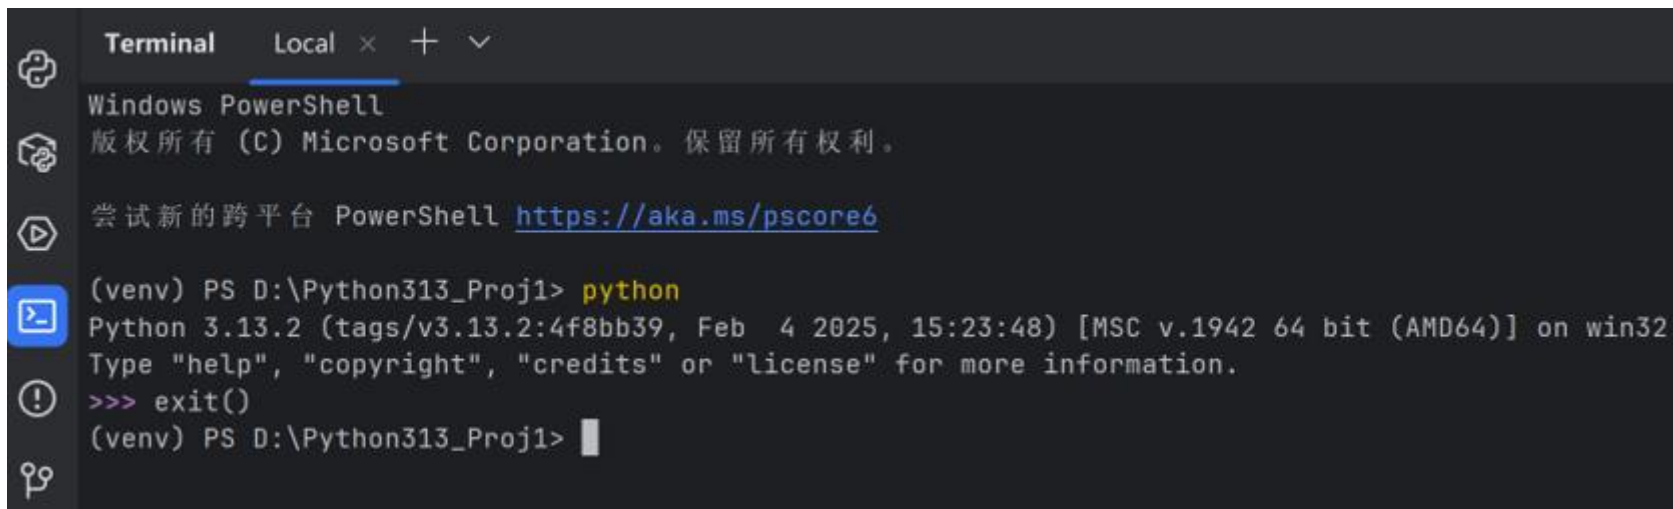


```
Terminal Local x + v
Windows PowerShell
版權所有 (C) Microsoft Corporation。保留所有權利。

尝试新的跨平台 PowerShell https://aka.ms/pscore6

(venv) PS D:\Python313_Proj1> python
Python 3.13.2 (tags/v3.13.2:4f8bb39, Feb  4 2025, 15:23:48) [MSC v.1942 64 bit (AMD64)] on win32
Type "help", "copyright", "credits" or "license" for more information.
>>> exit()
(venv) PS D:\Python313_Proj1>
```

1 D:\Python_Test>pip install D:\Python\Python313_KU\setuptools-75.6.0-py3-none-any.whl

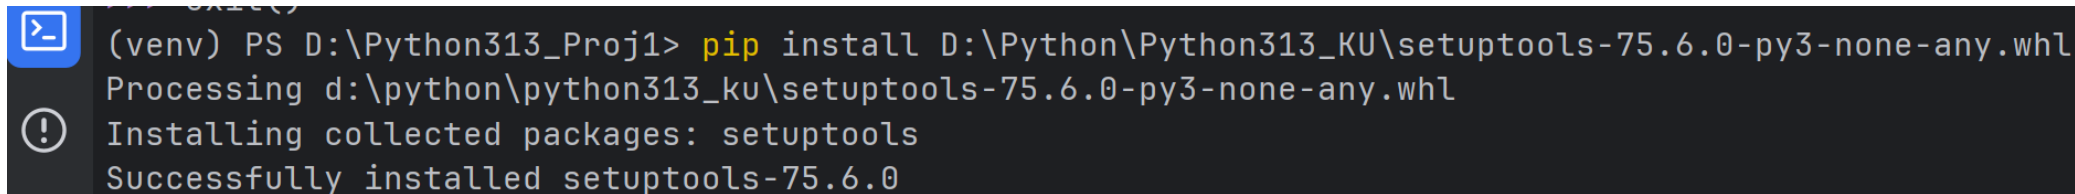

```
(venv) PS D:\Python313_Proj1> pip install D:\Python\Python313_KU\setuptools-75.6.0-py3-none-any.whl
Processing d:\python\python313_ku\setuptools-75.6.0-py3-none-any.whl
Installing collected packages: setuptools
Successfully installed setuptools-75.6.0
```

- Setuptools 是取代Python distutils 標準模塊的替代包，主要用於各種第三方包安裝管理

恭喜你, 成功安裝 <setuptools>

Openpyxl Terminal 安裝代碼(2):

1 D:\Python_Test>pip install D:\Python\Python313_KU\et_xmlfile-2.0.0-py3-none-any.whl

```
(venv) PS D:\Python313_Proj1> pip install D:\Python\Python313_KU\et_xmlfile-2.0.0-py3-none-any.whl
Processing d:\python\python313_ku\et_xmlfile-2.0.0-py3-none-any.whl
Installing collected packages: et-xmlfile
Successfully installed et-xmlfile-2.0.0
```

2 D:\Python_Test>pip install D:\Python\Python313_KU\openpyxl-3.1.5-py2.py3-none-any.whl

```
(venv) PS D:\Python313_Proj1> pip install D:\Python\Python313_KU\et_xmlfile-2.0.0-py3-none-any.whl
Processing d:\python\python313_ku\et_xmlfile-2.0.0-py3-none-any.whl
Installing collected packages: et-xmlfile
Successfully installed et-xmlfile-2.0.0
```

恭喜你, 成功安裝 <openpyxl>

Pandas Terminal 安裝代碼(6):

文件名称中含“cp”的，表示适用不同python版本。
此文件含“cp310”适用Python 3.10。以下以此类推。

1

D:\Python_Test>pip install D:\Python\Python310_KU\numpy-1.22.2+mkl-cp310-cp310-win_amd64.whl

```
Terminal: Local x +
Structure
favorites
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\numpy-1.22.2+mkl-cp310-cp310-win_amd64.whl
Processing d:\python\python310_ku\numpy-1.22.2+mkl-cp310-cp310-win_amd64.whl
Installing collected packages: numpy
Successfully installed numpy-1.22.2+mkl
```

若是Python 3.13, 则安装numpy-2.2.0-cp313-cp313-win_amd64.whl

2

D:\Python_Test>pip install D:\Python\Python310_KU\six-1.17.0-py2.py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\six-1.16.0-py3-none-any.whl
Processing d:\python\python310_ku\six-1.16.0-py3-none-any.whl
Installing collected packages: six
Successfully installed six-1.16.0
```

3

D:\Python_Test>pip install D:\Python\Python310_KU\python_dateutil-2.9.0.post0-py2.py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\python_dateutil-2.8.2-py3-none-any.whl
Processing d:\python\python310_ku\python_dateutil-2.8.2-py3-none-any.whl
Requirement already satisfied: six>=1.5 in d:\python_test\venv\lib\site-packages (from python-dateutil==2.8.2)
Installing collected packages: python-dateutil
Successfully installed python-dateutil-2.8.2
```


D:\Python_Test>pip install D:\Python\Python310_KU\pytz-2024.2-py2.py3-none-any.whl

4

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\pytz-2021.3-py3-none-any.whl
Processing d:\python\python310_ku\pytz-2021.3-py3-none-any.whl
Installing collected packages: pytz
Successfully installed pytz-2021.3
```

5

D:\Python_Test>pip install D:\Python\Python310_KU\tzdata-2024.2-py2.py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\tzdata-2022.1-py2.py3-none-any.whl
Processing d:\python\python310_ku\tzdata-2022.1-py2.py3-none-any.whl
Installing collected packages: tzdata
Successfully installed tzdata-2022.1
```

6

D:\Python_Test>pip install D:\Python\Python310_KU\pandas-1.4.1-cp310-cp310-win_amd64.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\pandas-1.4.1-cp310-cp310-win_amd64.whl
Processing d:\python\python310_ku\pandas-1.4.1-cp310-cp310-win_amd64.whl
Requirement already satisfied: pytz>=2020.1 in d:\python_test\venv\lib\site-packages (from pandas==1.4.1) (2021.3)
Requirement already satisfied: numpy>=1.21.0 in d:\python_test\venv\lib\site-packages (from pandas==1.4.1) (1.22.2+mkl)
Requirement already satisfied: python-dateutil>=2.8.1 in d:\python_test\venv\lib\site-packages (from pandas==1.4.1) (2.8.2)
Requirement already satisfied: six>=1.5 in d:\python_test\venv\lib\site-packages (from python-dateutil>=2.8.1->pandas==1.4.1) (1.16.0)
Installing collected packages: pandas
```

若是Python 3.13, 则安装pandas-2.2.3-cp313-cp313-win_amd64.whl

恭喜你, 成功安装 <Pandas>

Xlwings Terminal 安裝代碼(2):

1

D:\Python_Test>pip install D:\Python\Python310_KU\pywin32-303-cp310-cp310-win_amd64.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\pywin32-303-cp310-cp310-win_amd64.whl
Processing d:\python\python310_ku\pywin32-303-cp310-cp310-win_amd64.whl
Installing collected packages: pywin32
Successfully installed pywin32-303
```

若是Python 3.13, 則安裝pywin32-308-cp313-cp313-win_amd64.whl

2

D:\Python_Test>pip install D:\Python\Python310_KU\xlwings-0.27.10-py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\xlwings-0.27.10-py3-none-any.whl
Processing d:\python\python310_ku\xlwings-0.27.10-py3-none-any.whl
Requirement already satisfied: pywin32>=224 in d:\python_test\venv\lib\site-packages (from xlwings==0.27.10)
Installing collected packages: xlwings
Successfully installed xlwings-0.27.10
```

若是Python 3.13, 則安裝xlwings-0.33.5-cp313-cp313-win_amd64.whl

恭喜你, 成功安裝 <Xlwings>

Python Word Terminal 安裝代碼(6):

1 D:\Python_Test>pip install D:\Python\Python310_KU\lxml-4.8.0-cp310-cp310-win_amd64.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\lxml-4.8.0-cp310-cp310-win_amd64.whl
Processing d:\python\python310_ku\lxml-4.8.0-cp310-cp310-win_amd64.whl
Installing collected packages: lxml
Successfully installed lxml-4.8.0
```

若是Python 3.13, 則安裝lxml-5.3.0-cp313-cp313-win_amd64.whl

2 D:\Python_Test>pip install D:\Python\Python310_KU\typing_extensions-4.12.2-py3-none-any.whl

```
(venv) D:\PythonTE1>pip install D:\Python\Python310_KU\typing_extensions-4.9.0-py3-none-any.whl
Processing d:\python\python310_ku\typing_extensions-4.9.0-py3-none-any.whl
Installing collected packages: typing-extensions
Successfully installed typing-extensions-4.9.0
```

3 D:\Python_Test>pip install D:\Python\Python310_KU\python_docx-1.1.2-py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\python-docx-0.8.10.tar.gz
Processing d:\python\python310_ku\python-docx-0.8.10.tar.gz
  Preparing metadata (setup.py) ... done
Requirement already satisfied: lxml>=2.3.2 in d:\python_test\venv\lib\site-packages (from python-docx==0.8.10)
Using legacy 'setup.py install' for python-docx, since package 'wheel' is not installed.
Installing collected packages: python-docx
  Running setup.py install for python-docx ... done
Successfully installed python-docx-0.8.10
```

4

D:\Python_Test>pip install D:\Python\Python310_KU\MarkupSafe-2.1.1-cp310-cp310-win_amd64.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\MarkupSafe-2.1.1-cp310-cp310-win_amd64.whl
Processing d:\python\python310_ku\markupsafe-2.1.1-cp310-cp310-win_amd64.whl
Installing collected packages: MarkupSafe
Successfully installed MarkupSafe-2.1.1
```

若是Python 3.13, 则安装MarkupSafe-3.0.2-cp313-cp313-win_amd64.whl

5

D:\Python_Test>pip install D:\Python\Python310_KU\jinja2-3.1.4-py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\Jinja2-3.1.2-py3-none-any.whl
Processing d:\python\python310_ku\jinja2-3.1.2-py3-none-any.whl
Requirement already satisfied: MarkupSafe>=2.0 in d:\python_test\venv\lib\site-packages (from Jinja2==3.1.2)
Installing collected packages: Jinja2
Successfully installed Jinja2-3.1.2
```

6

D:\Python_Test>pip install D:\Python\Python313_KU\babel-2.17.0-py3-none-any.whl

```
(venv) PS D:\Python312_Test> pip install D:\Python\Python313_KU\babel-2.17.0-py3-none-any.whl
DEPRECATION: Loading egg at d:\python312_test\venv\lib\site-packages\img2pdf-0.5.1-py3.12.egg
3.3 will enforce this behaviour change. A possible replacement is to use pip for package insta
Processing d:\python\python313_ku\babel-2.17.0-py3-none-any.whl
Installing collected packages: babel
Successfully installed babel-2.17.0
```

7

D:\Python_Test>pip install D:\Python\Python310_KU\docxtpl-0.11.2-py2.py3-none-any.whl

```
(venv) D:\PythonTE1>pip install D:\Python\Python310_KU\docxtpl-0.16.7-py2.py3-none-any.whl
Processing d:\python\python310_ku\docxtpl-0.16.7-py2.py3-none-any.whl
Requirement already satisfied: python-docx in d:\pythontel\venv\lib\site-packages (from docxtpl==0.16.7) (1.1.0)
Requirement already satisfied: lxml in d:\pythontel\venv\lib\site-packages (from docxtpl==0.16.7) (4.8.0)
Requirement already satisfied: docxcompose in d:\pythontel\venv\lib\site-packages (from docxtpl==0.16.7) (1.4.0)
Requirement already satisfied: ji
Requirement already satisfied: si
Requirement already satisfied: se
Requirement already satisfied: babel in d:\pythontel\venv\lib\site-packages (from docxcompose->docxtpl==0.16.7) (2.14.0)
Requirement already satisfied: typing-extensions in d:\pythontel\venv\lib\site-packages (from python-docx->docxtpl==0.16.7) (4.9.0)
Requirement already satisfied: MarkupSafe>=2.0 in d:\pythontel\venv\lib\site-packages (from jinja2->docxtpl==0.16.7) (2.1.1)
Installing collected packages: docxtpl
Successfully installed docxtpl-0.16.7
```

恭喜你, 成功安裝 <docxtpl>

Pillow Terminal 安裝代碼(1):

1

D:\Python_Test>pip install D:\Python\Python310_KU\Pillow-9.0.1-cp310-cp310-win_amd64.whl

若是Python 3.13, 则安装pillow-11.0.0-cp313-cp313-win_amd64.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\Pillow-9.0.1-cp310-cp310-win_amd64.whl
Processing d:\python\python310_ku\pillow-9.0.1-cp310-cp310-win_amd64.whl
Installing collected packages: Pillow
Successfully installed Pillow-9.0.1
```

- Pillow 是一個畫圖處理庫，可讀、寫、存圖片，例如可生成.gif文件

恭喜你, 成功安裝 <pillow>

Python powerpoint Terminal 安裝代碼(2):

1 D:\Python_Test>pip install D:\Python\Python310_KU\XlsxWriter-3.2.0-py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\XlsxWriter-3.0.3-py3-none-any.whl
Processing d:\python\python310_ku\xlsxwriter-3.0.3-py3-none-any.whl
Installing collected packages: XlsxWriter
Successfully installed XlsxWriter-3.0.3
```

2 D:\Python_Test>pip install D:\Python\Python310_KU\python_pptx-1.0.2-py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\python-pptx-0.6.21.tar.gz
Processing d:\python\python310_ku\python-pptx-0.6.21.tar.gz
  Preparing metadata (setup.py) ... done
Requirement already satisfied: lxml>=3.1.0 in d:\python_test\venv\lib\site-packages (from python-pptx==0.6.21) (4.8.0)
Requirement already satisfied: Pillow>=3.3.2 in d:\python_test\venv\lib\site-packages (from python-pptx==0.6.21) (9.0)
Requirement already satisfied: XlsxWriter>=0.5.7 in d:\python_test\venv\lib\site-packages (from python-pptx==0.6.21)
Using legacy 'setup.py install' for python-pptx, since package 'wheel' is not installed.
Installing collected packages: python-pptx
  Running setup.py install for python-pptx ... done
Successfully installed python-pptx-0.6.21
```

恭喜你, 成功安裝 <python-pptx>

Django Terminal 安裝代碼(3):

1 D:\Python_Test>pip install D:\Python\Python310_KU\sqlparse-0.5.3-py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\sqlparse-0.4.2-py3-none-any.whl
Processing d:\python\python310_ku\sqlparse-0.4.2-py3-none-any.whl
Installing collected packages: sqlparse
Successfully installed sqlparse-0.4.2
```

2 D:\Python_Test>pip install D:\Python\Python310_KU\asgiref-3.8.1-py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\asgiref-3.5.0-py3-none-any.whl
Processing d:\python\python310_ku\asgiref-3.5.0-py3-none-any.whl
Installing collected packages: asgiref
Successfully installed asgiref-3.5.0
```

3

D:\Python_Test>pip install D:\Python\Python310_KU\Django-5.1.4-py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\Django-4.0.3-py3-none-any.whl
Processing d:\python\python310_ku\django-4.0.3-py3-none-any.whl
Requirement already satisfied: asgiref<4,>=3.4.1 in d:\python_test\venv\lib\site-packages (from Django==4.0.3)
Requirement already satisfied: tzdata in d:\python_test\venv\lib\site-packages (from Django==4.0.3) (2022.1)
Requirement already satisfied: sqlparse>=0.2.2 in d:\python_test\venv\lib\site-packages (from Django==4.0.3) (0
Installing collected packages: Django
Successfully installed Django-4.0.3
```

恭喜你, 成功安裝 <Django>

Matplotlib Terminal 安裝代碼(7):

1 D:\Python_Test>pip install D:\Python\Python310_KU\pyparsing-3.2.0-py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\pyparsing-3.0.7-py3-none-any.whl
Processing d:\python\python310_ku\pyparsing-3.0.7-py3-none-any.whl
Installing collected packages: pyparsing
Successfully installed pyparsing-3.0.7
```

2 D:\Python_Test>pip install D:\Python\Python310_KU\kiwisolver-1.3.2-cp310-cp310-win_amd64.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\kiwisolver-1.3.2-cp310-cp310-win_amd64.whl
Processing d:\python\python310_ku\kiwisolver-1.3.2-cp310-cp310-win_amd64.whl
Installing collected packages: kiwisolver
Successfully installed kiwisolver-1.3.2
```

若是Python 3.13, 則安裝kiwisolver-1.4.7-cp313-cp313-win_amd64.whl

3 D:\Python_Test>pip install D:\Python\Python310_KU\packaging-21.3-py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\packaging-21.3-py3-none-any.whl
Processing d:\python\python310_ku\packaging-21.3-py3-none-any.whl
Requirement already satisfied: pyparsing!=3.0.5, >=2.0.2 in d:\python_test\venv\lib\site-packages
Installing collected packages: packaging
Successfully installed packaging-21.3
```

若是Python 3.13, 則安裝packaging-24.2-py3-none-any.whl

4

D:\Python_Test>pip install D:\Python\Python310_KU\fonttools-4.34.4-py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\fonttools-4.34.4-py3-none-any.whl
Processing d:\python\python310_ku\fonttools-4.34.4-py3-none-any.whl
Installing collected packages: fonttools
Successfully installed fonttools-4.34.4
```

若是Python 3.13, 则安装fonttools-4.55.3-cp313-cp313-win_amd64.whl

5

D:\Python_Test>pip install D:\Python\Python310_KU\cyclor-0.12.1-py3-none-any.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\cyclor-0.11.0-py3-none-any.whl
Processing d:\python\python310_ku\cyclor-0.11.0-py3-none-any.whl
Installing collected packages: cyclor
Successfully installed cyclor-0.11.0
```

6

D:\Python_Test>pip install D:\Python\Python310_KU\contourpy-1.2.0-cp310-cp310-win_amd64.whl

```
(venv) D:\PythonTE1>pip install D:\Python\Python310_KU\contourpy-1.2.0-cp310-cp310-win_amd64.whl
Processing d:\python\python310_ku\contourpy-1.2.0-cp310-cp310-win_amd64.whl
Requirement already satisfied: numpy<2.0, >=1.20
Installing collected packages: contourpy
Successfully installed contourpy-1.2.0
```

若是Python 3.13, 则安装contourpy-1.3.1-cp313-cp313-win_amd64.whl

7

D:\Python_Test>pip install D:\Python\Python310_KU\matplotlib-3.5.1-cp310-cp310-win_amd64.whl

```
(venv) D:\Python_Test>pip install D:\Python\Python310_KU\matplotlib-3.5.1-cp310-cp310-win_amd64.whl
Processing d:\python\python310_ku\matplotlib-3.5.1-cp310-cp310-win_amd64.whl
Requirement already satisfied: fonttools>=4.22.0 in d:\python_test\venv\lib\site-packages (from matplotlib==3.5.1) (4.34.4)
Requirement already satisfied: cycler>=0.10
Requirement already satisfied: pyparsing>=2.2.1 in d:\python_test\venv\lib\site-packages (from matplotlib==3.5.1) (3.0.7)
Requirement already satisfied: pillow>=6.2.0 in d:\python_test\venv\lib\site-packages (from matplotlib==3.5.1) (9.0.1)
Requirement already satisfied: numpy>=1.17 in d:\python_test\venv\lib\site-packages (from matplotlib==3.5.1) (1.22.2+mkl)
Requirement already satisfied: kiwisolver>=1.0.1 in d:\python_test\venv\lib\site-packages (from matplotlib==3.5.1) (1.3.2)
Requirement already satisfied: python-dateutil>=2.7 in d:\python_test\venv\lib\site-packages (from matplotlib==3.5.1) (2.8.
Requirement already satisfied: packaging>=20.0 in d:\python_test\venv\lib\site-packages (from matplotlib==3.5.1) (21.3)
Requirement already satisfied: six>=1.5 in d:\python_test\venv\lib\site-packages (from python-dateutil>=2.7->matplotlib==3.
Installing collected packages: matplotlib
Successfully installed matplotlib-3.5.1
```

若是Python 3.13, 则安装matplotlib-3.10.0-cp313-cp313-win_amd64.whl

- Matplotlib 是數據視圖處理包，是Python數據可視化處理的元祖之一，例如可以用數據變量產生二維圖(柱狀圖、折綫圖、散點圖、雷達圖等)、三維圖等

恭喜你, 成功安裝 <Matplotlib>

xlrd Terminal 安裝代碼():

1 D:\Python_Test>pip install D:\Python\Python310_KU\pyparsing-3.2.0-py3-none-any.whl



```
(venv) PS D:\Python312_MQC> pip install D:\Python\Python313_KU\xlrd-2.0.1-py2.py3-none-any.whl
DEPRECATION: Loading egg at d:\python312_test\venv\lib\site-packages\img2pdf-0.5.1-py3.12.egg is deprecated; python
3.3 will enforce this behaviour change. A possible replacement is to use pip for package installation
Processing d:\python\python313_ku\xlrd-2.0.1-py2.py3-none-any.whl
```

- xlrd 是一個處理xls文件類的第三方庫

恭喜你, 成功安裝 <xlrd>

Pycharm檢查安裝情況：

- 1 點擊順序：File -> Settings -> Project: Python_Test -> Python Interpreter
- 2 檢查Package 的清單，若顯示，表示安裝成功了。本文中清單共有34項

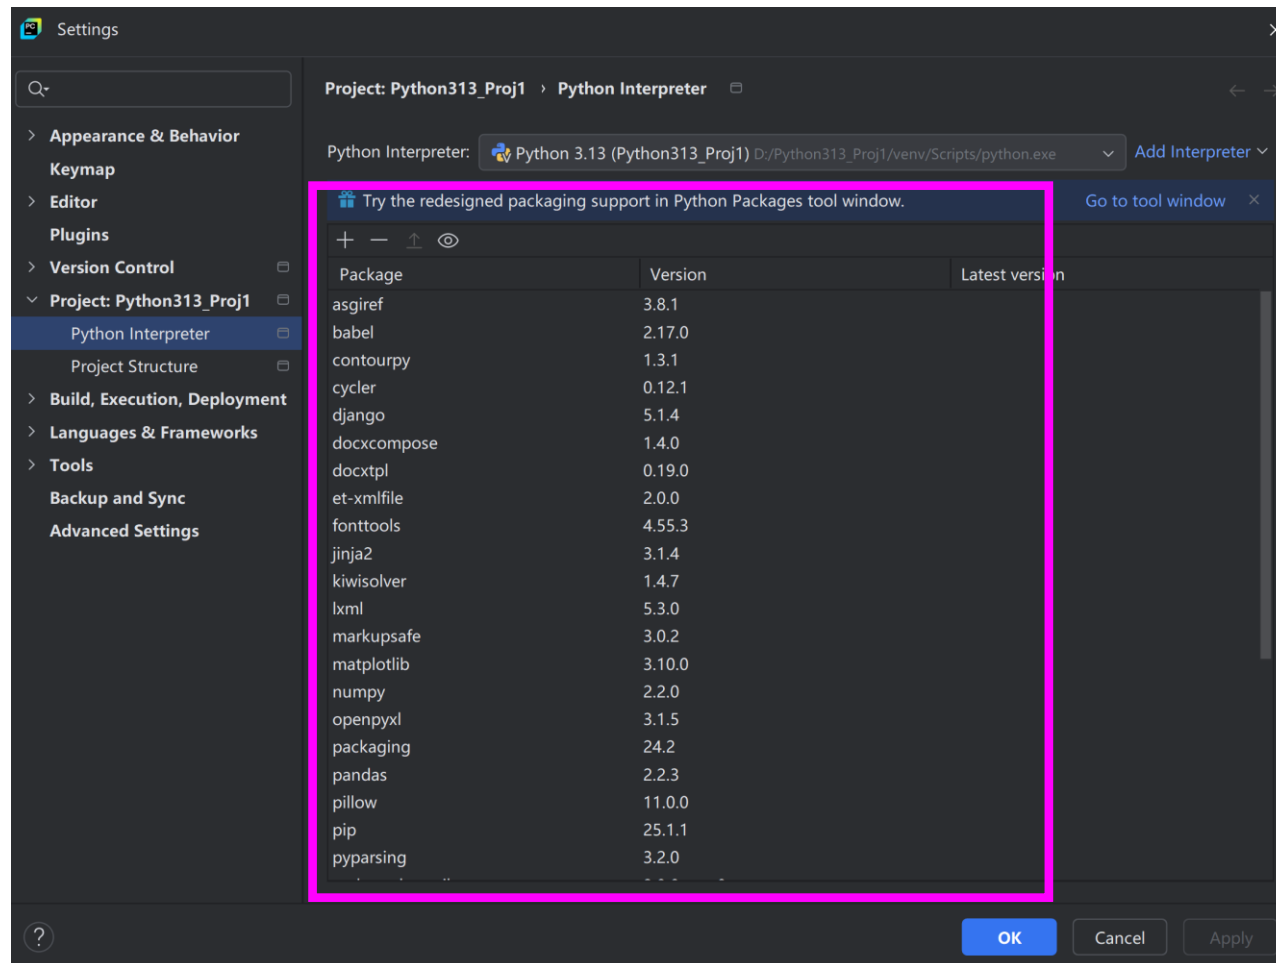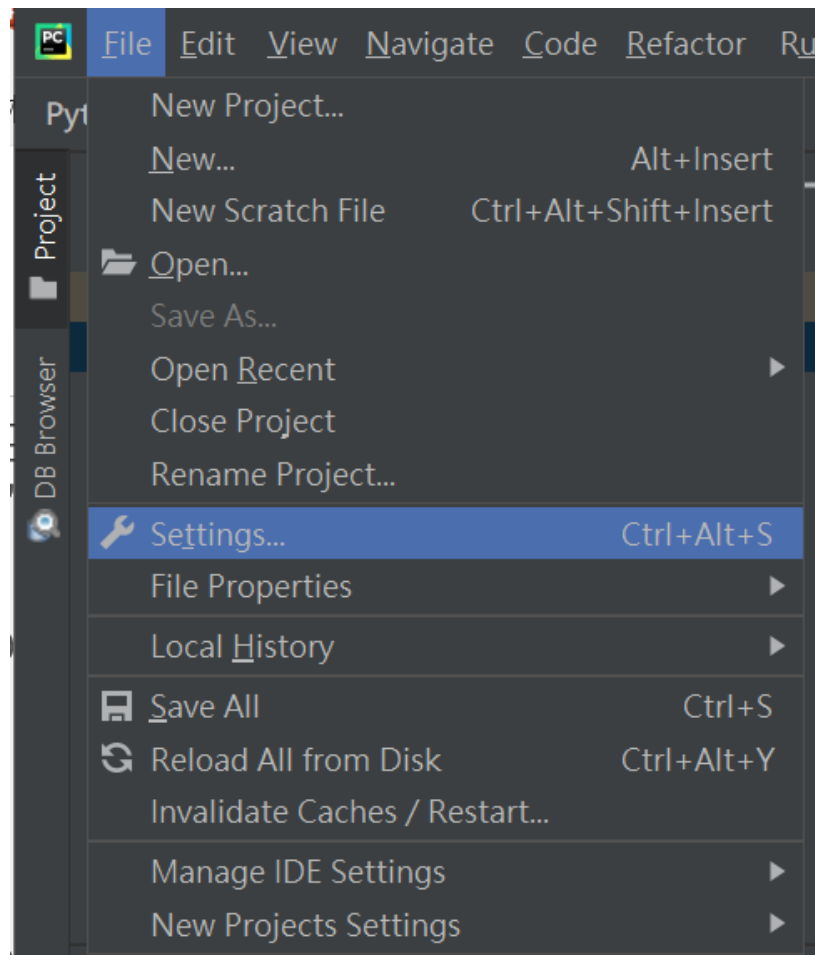


Pycharm基礎使用教程：


- 新建一個文件或者文件夾

1. 光標選中Pycharm Project界面中的根目錄,例如本文中的Python_Test
2. 鼠標右鍵選擇New, 或者菜單欄: File -> New -> 選擇所需文件(夾)類型
3. 在跳出來的對話框中輸入文件(夾)名稱, 按下Enter鍵回車
4. 在新建的文件中, 試著寫一些代碼


1

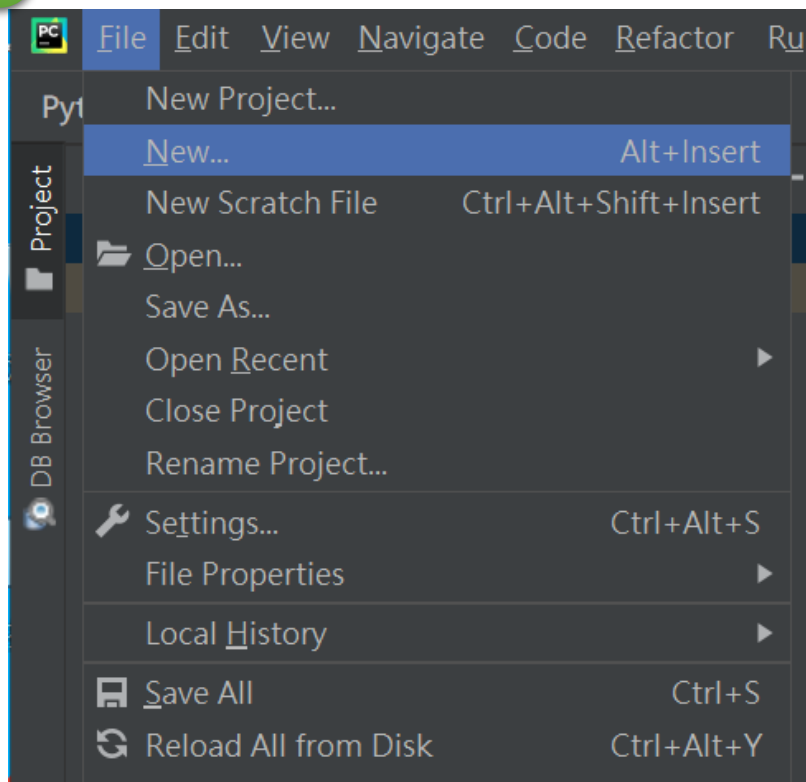


2

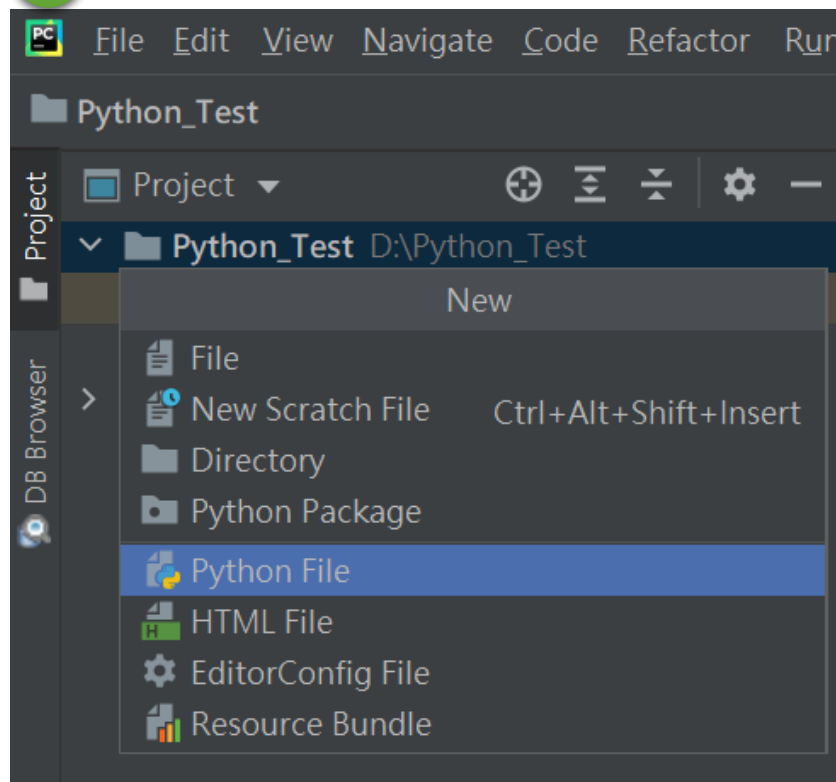

3

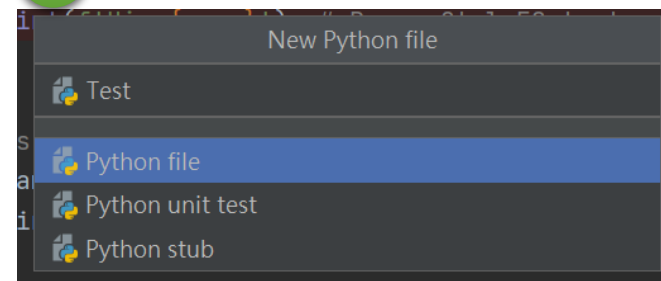

4

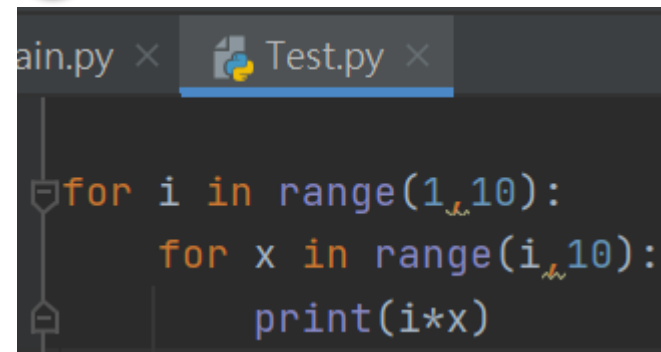


- 運程式代碼

5.中間偏右的綠色三角可運行，最左下角的三角 也可運程式

5. 點擊鼠標右鍵的快捷菜單中，也可直接選擇”Run...“， 通常用此方式運程式。

6. 運行結果顯示在底端， 包括是否運行成功， 第幾行有traceback bug等


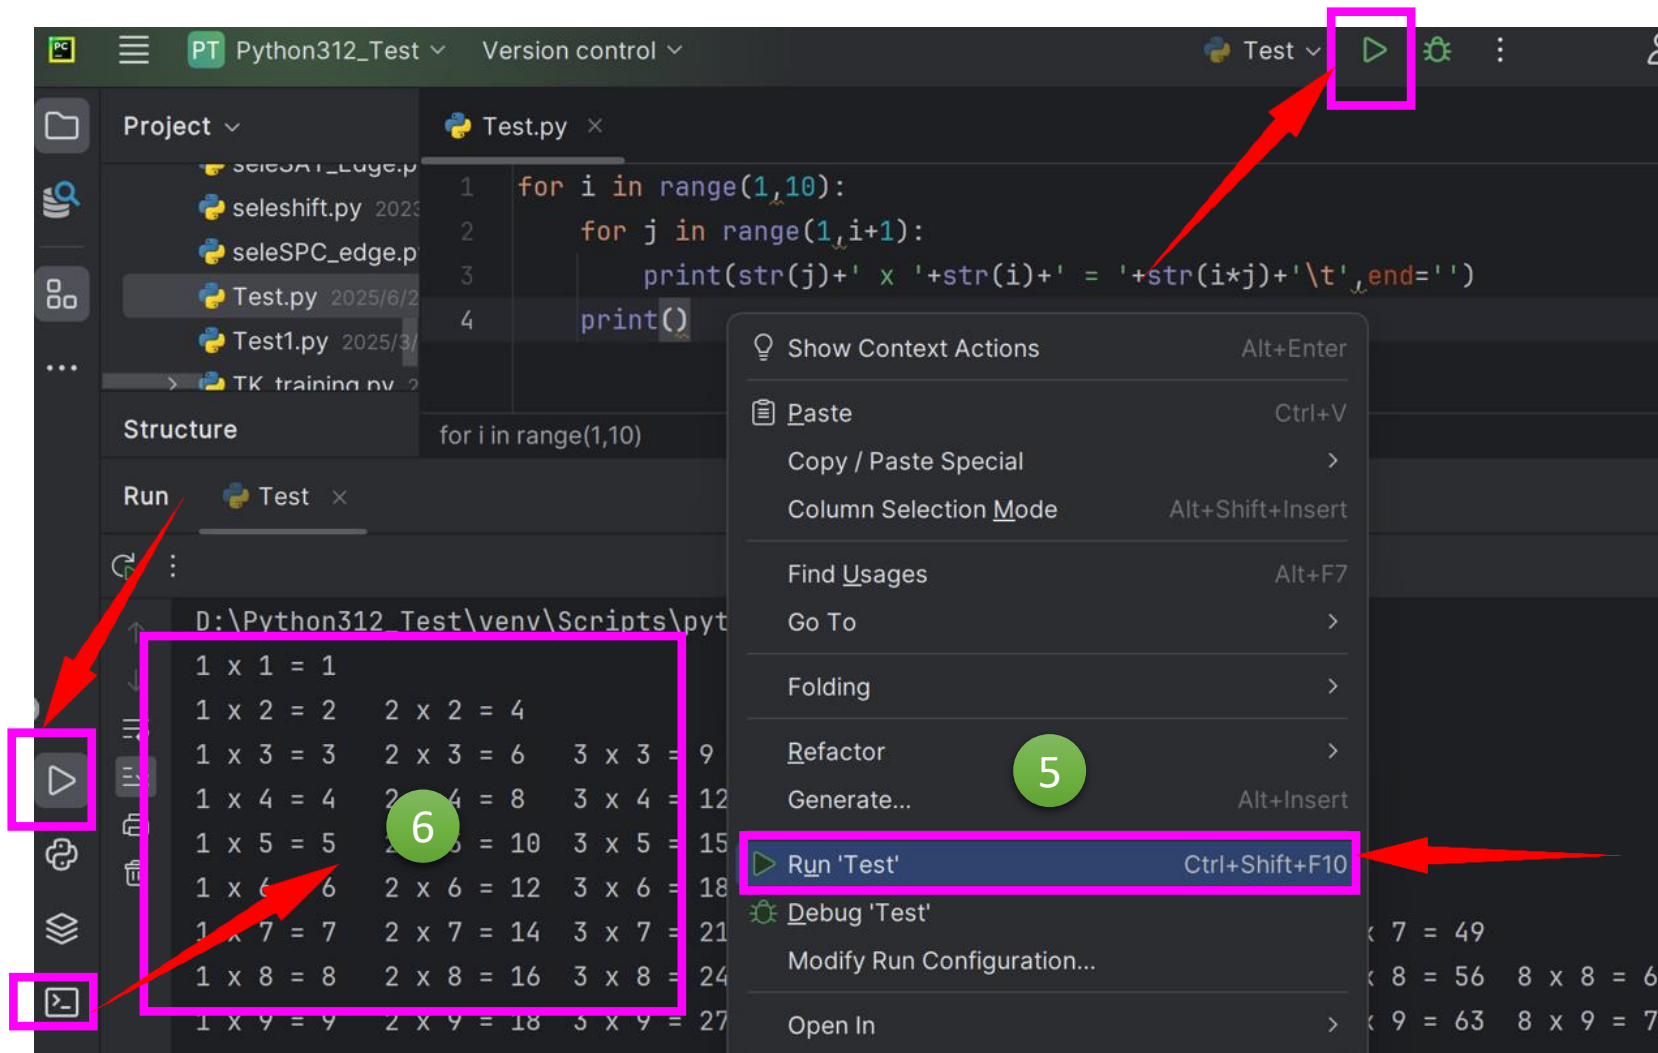


- **更換不同Project**


7. 點擊主菜單:File =>Close Project, 表示關閉當前Project

8. 點擊“Welcome to Pycharm”界面中的Project清單,或者點擊“Open” 打開不在界面中的Project。

9. 若點擊某個Project右邊的三點, 則會彈出快捷菜單

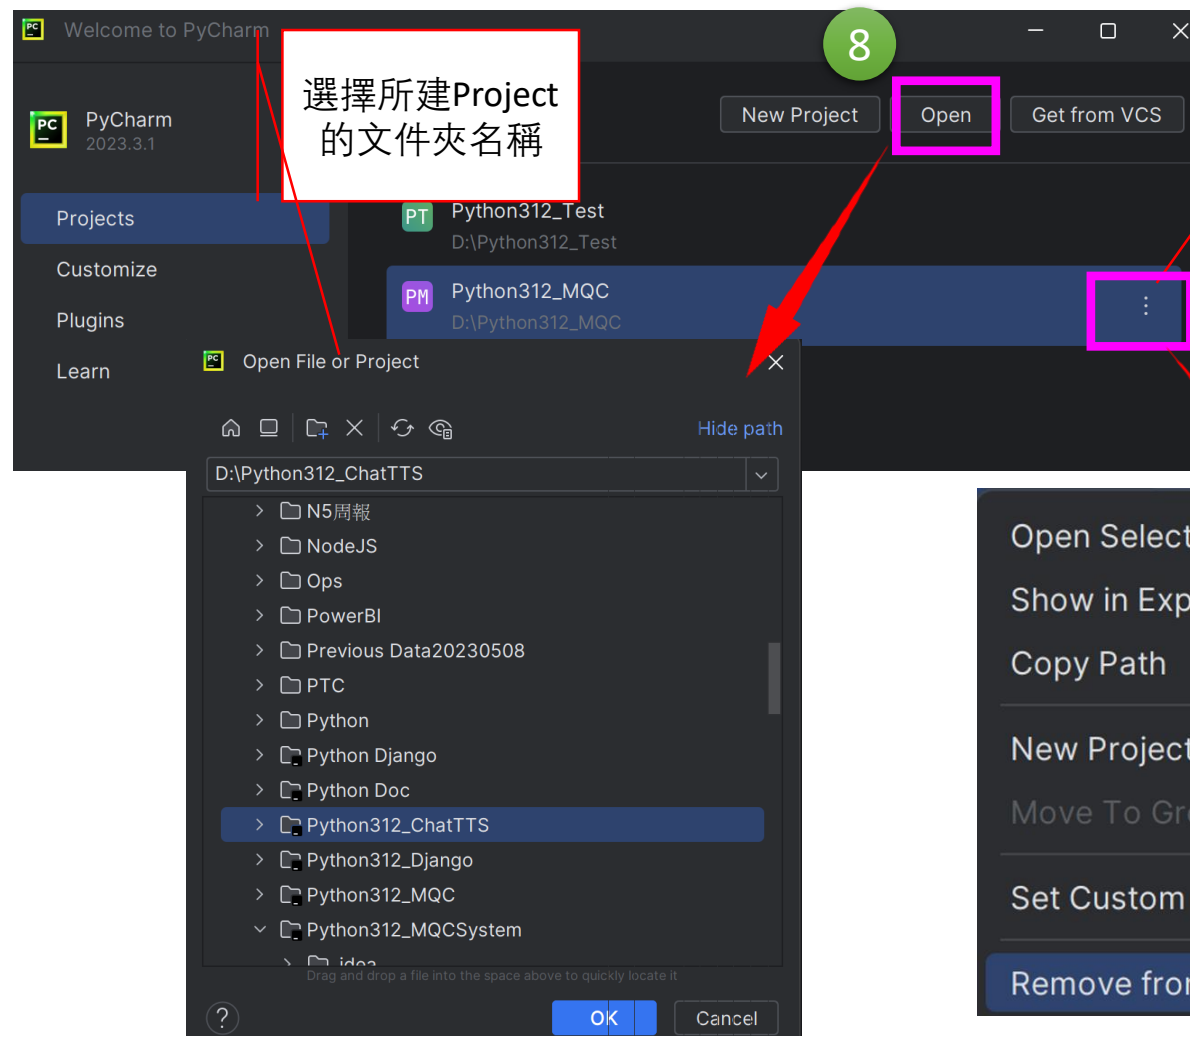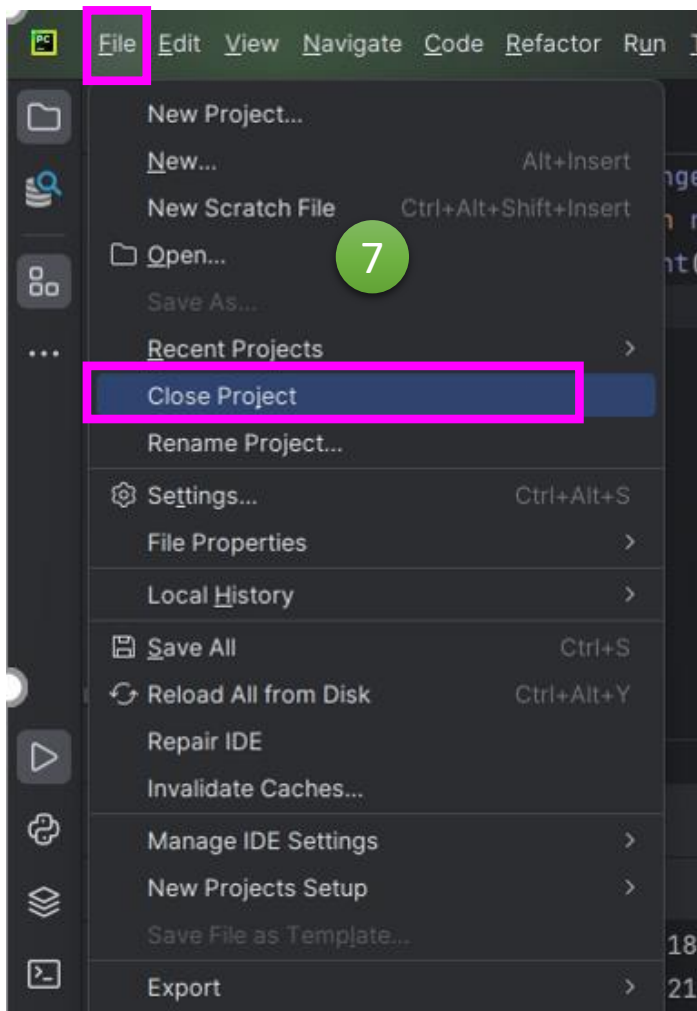

右擊三點, 彈出快捷菜單, 其中 Remove...表示從界面中移除該Project

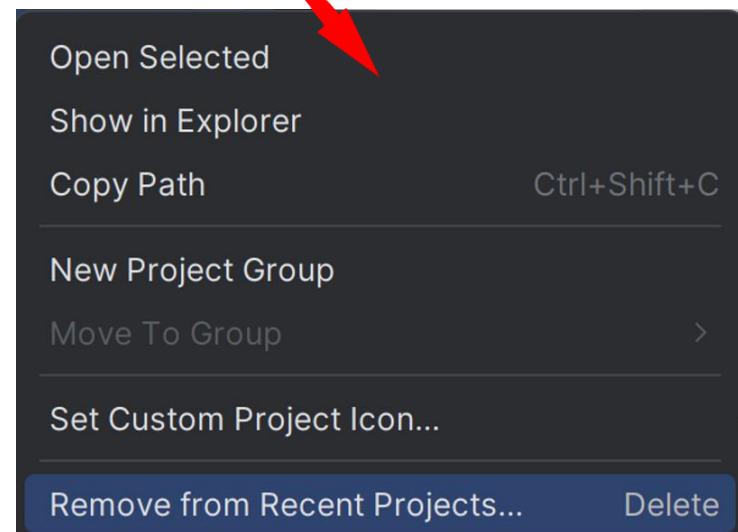

Thanks